

Wireless 2D Barcode Scanner

1、 Reset Scanner

Please scan the barcode in order to set all parameters to the default value.



Restore Factory Defaults



Serial Communication



Baud Rate 19200

Attention: There is no terminators after restoring to Factory Defaults. If needed, please refer to step 2, otherwise jump to step 3.

2、 Add Suffix



Termination char-CR



Termination char-LF



Termination char-CR+LF



Termination char- TAB

3、 Connect to Receiver

SET UP COMMUNICATION



AUTO FREQUENCY



DISCONNECT FROM THE SCANNER



4、 Scan Mode Setting



Manual Mode



Continue Scan Mode